




SENTINEL TRAILER ONLY INSTALL SWE-0T-00A1

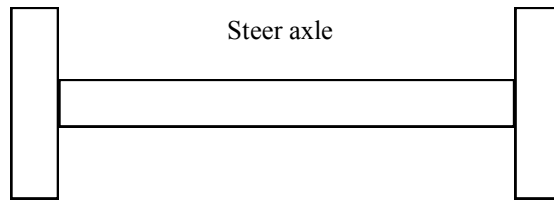


*The Sentinel weighing system is expandable. It can be configured for trailer only application. The tractor can be added by installing additional sensors.

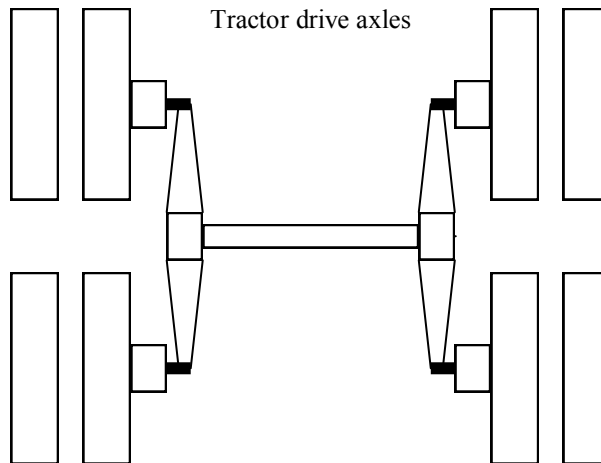

Sentinel wireless air sensor (1)

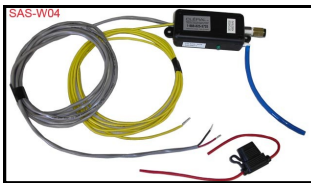

Connect sensors to switched 12v power source. Important: must be at least 12v. NO LESS. Power source less than 12v may cause sensor to not function properly.

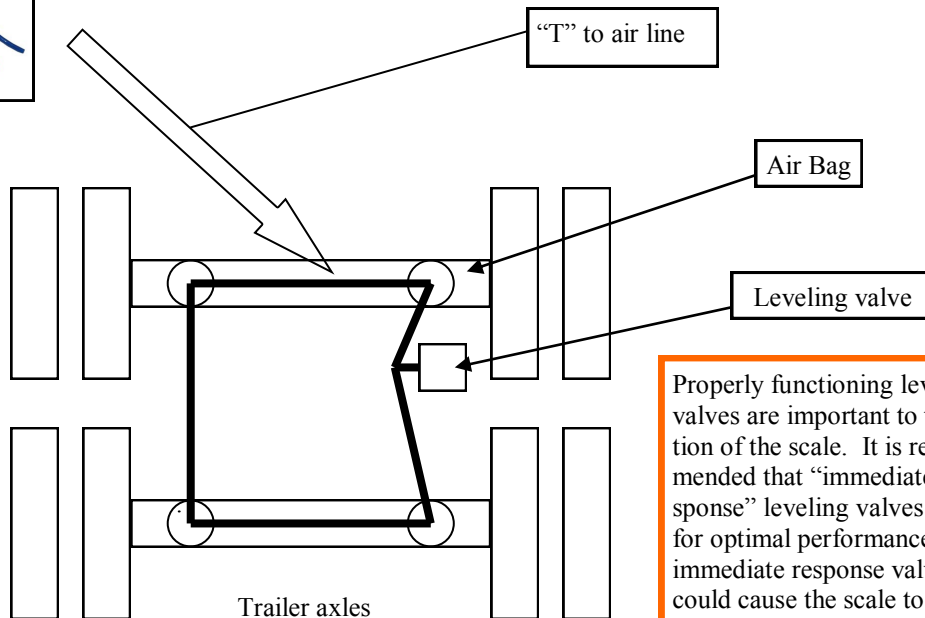

Properly functioning leveling valves are important to the function of the scale. It is recommended that "immediate response" leveling valves be used for optimal performance. Non immediate response valves could cause the scale to react slowly.

*Additional sensors can be added for additional axle groups.